



# TSHD INSTRUCTIONS

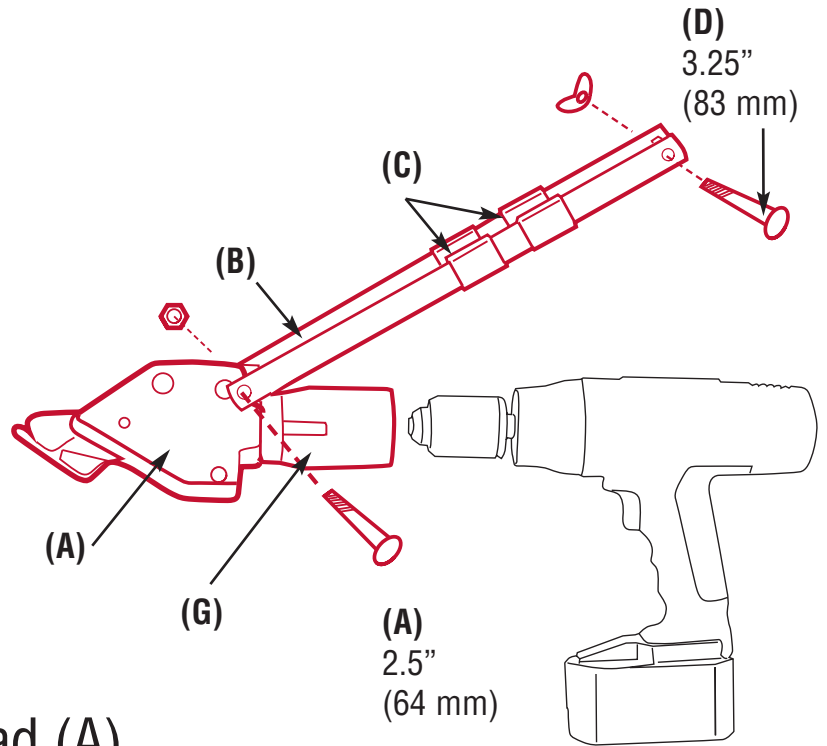

1. Install braces (B) on shear head (A).
2. Avoid pinch point. Slide flexible guard (G) over round collar of TurboShear HD Head. Insert drive shaft and tighten chuck before positioning clamp and tightening ends of rails (D).
3. Position side grips (C). Do not cover air vents.

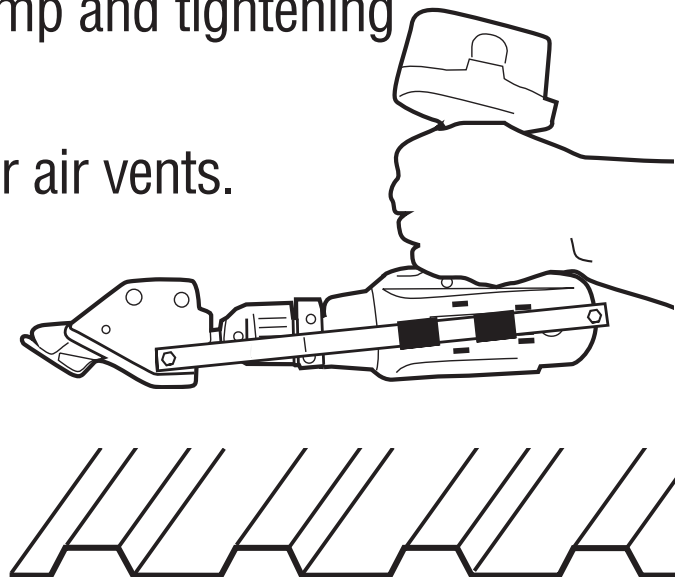

Re-position upside down as required for greater maneuverability.