


Victorian Install Guide/Concepts

Victorian is a historic metal shingle - details shown may not be applicable in some scenarios. Custom trim details are available for proper match on historic buildings.

Victorian - Trim Profiles

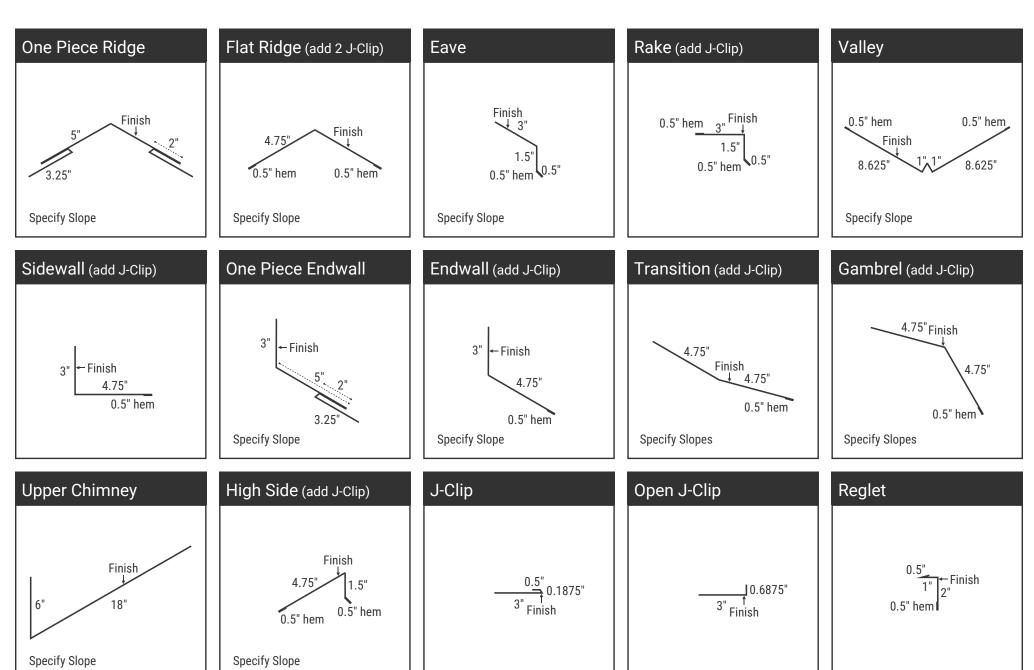

All trim is 10' long. Flat Sheets and custom trim are available.

Victorian - Install Sequence

- (1) Victorian is a water shedding roof system not a water-tight roof system. As such, Ice & Water shield must be installed over the entire roof surface prior to installation.
- (2) Victorian locks right to left. Because of it's historic design, Victorian does not have the 4-way interlock found on most of our other metal shingles.
- (3) Victorian is not recommended for slopes under 4:12, nor over existing shingles.


Gable Roof (shown uses One Piece Ridge)


- a. Install Eave
- b. Install Rake
- c. Install **J-Clip** on starting rake edge (left if looking at roof toward the eave from the ground) and **Open J-Clip** on ending rake edge (right if looking at roof toward the eave from the ground).
- d. Install **One Piece Ridge** at ridges each will need the bottom open hem flange removed before lapping.
- e. Install **Ice & Water Shield** over entire roof, lapping over Eave and J-Clip by 2" 2.5". At ridge, final row of Ice & Water Shield should tuck inside open hem flange if possible.
- f. Install **Victorian Shingles** from left to right, with the first shingle tucked into the J-Clip and extending over the Eave by 1/4" 1/2".
- g. **Stagger rows** by 1/2 shingle. **Chalk lines** between each row to keep rows straight. When needed adjust the bottom shingle to **keep the top aligned** with the chalk line. (Keep at least 75% of any specific shingle engaged).
- h. Fold down hem on Open J-Clip at ending rake.


Hip Roof with Dormer (shown uses One Piece Ridge)


- a. Install Eave
- b. Install Rake
- c. Install Sidewall
- d. Install **J-Clip** on starting rake and sidewall edges (left if looking at roof toward the eave from the ground) and **Open J-Clip** on ending rake and sidewall edge (right if looking at roof toward the eave from the ground).
- e. Install **One Piece Ridge** on hips each will need the bottom open hem flange removed before lapping.
- f. Install **Ice & Water Shield** over entire roof, lapping over Eave and J-Clip by 2" 2.5". At ridges/hips, final row of Ice & Water Shield should tuck inside open hem flange if possible.
- g. Install **Victorian Shingles** on main roof up to level of valley on dormer.
- h. Install valley over shingles on main roof, overlapping at top.
- i. Install **One Piece Ridge** on both dormer and main roof ridges each will need the bottom open hem flange removed before lapping. On dormer, ridge will go over valleys and the top section flattened to fit under shingles on main roof.
- j. Install **Victorian Shingles** on the remainder of main roof and dormer.
- k. Fold down hem on Open J-Clip at ending rake and sidewall.



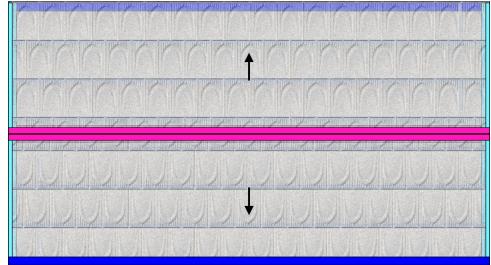


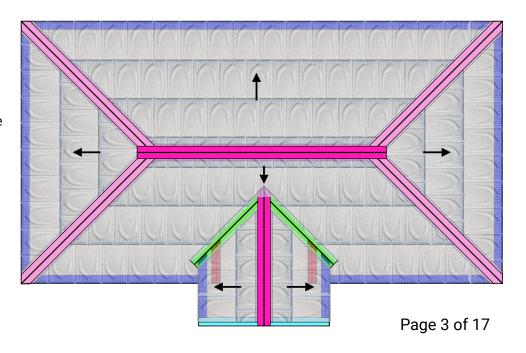


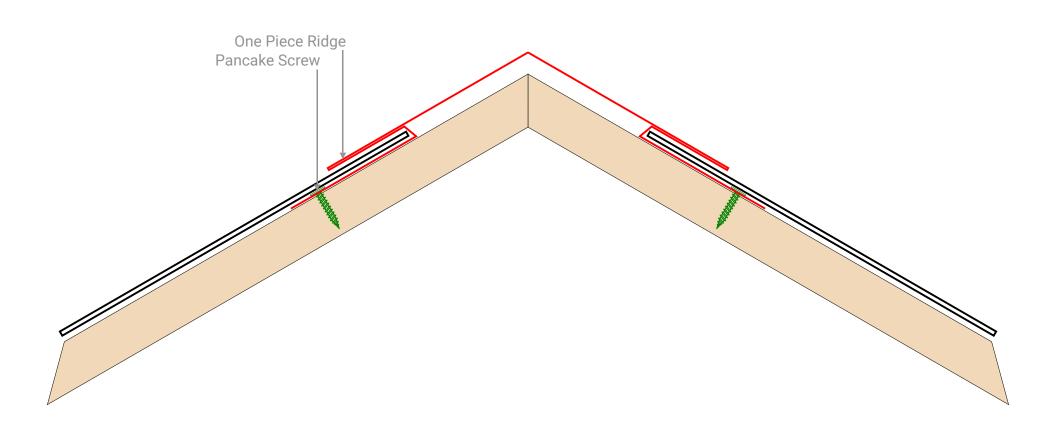


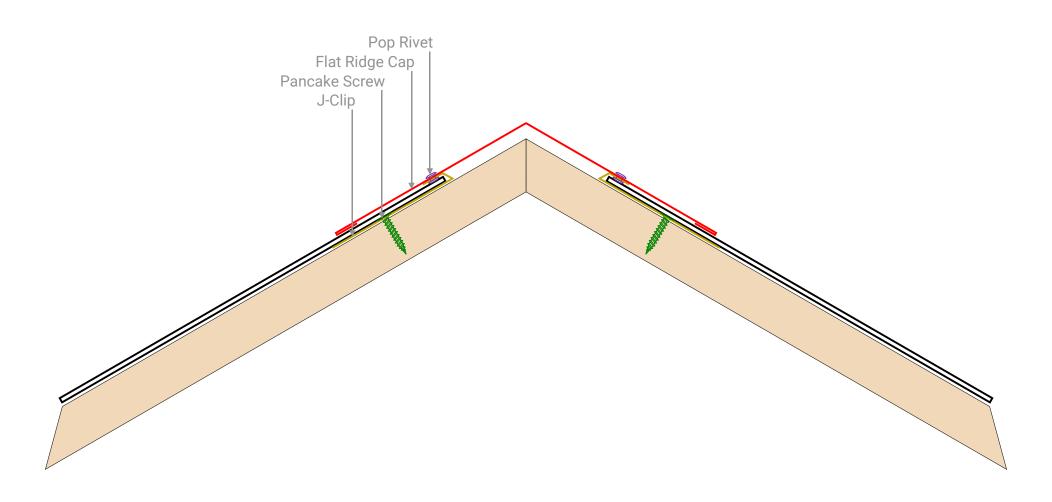



Victorian - Eave

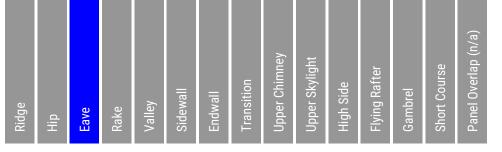


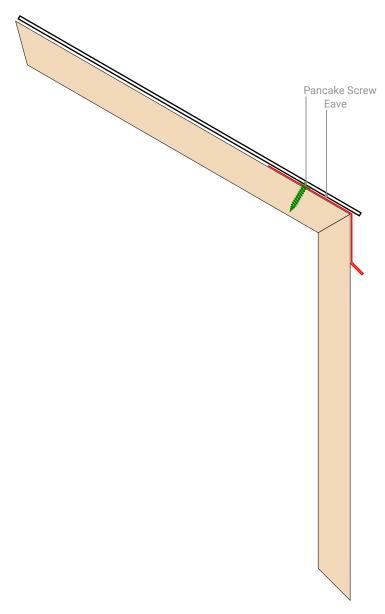

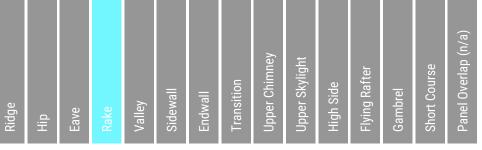


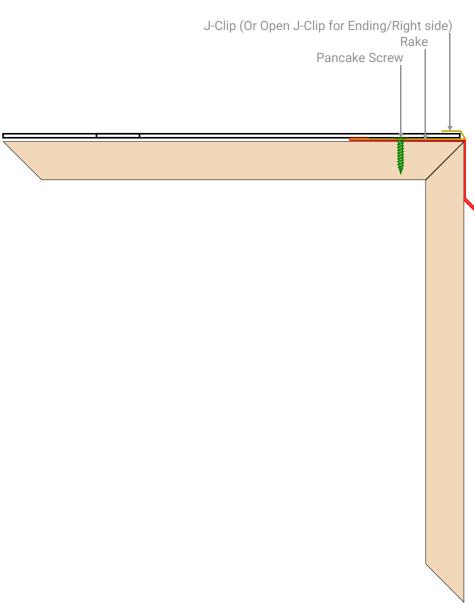


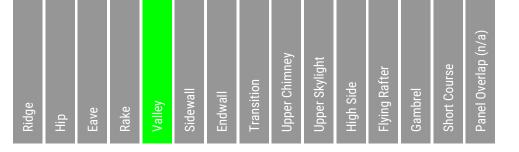


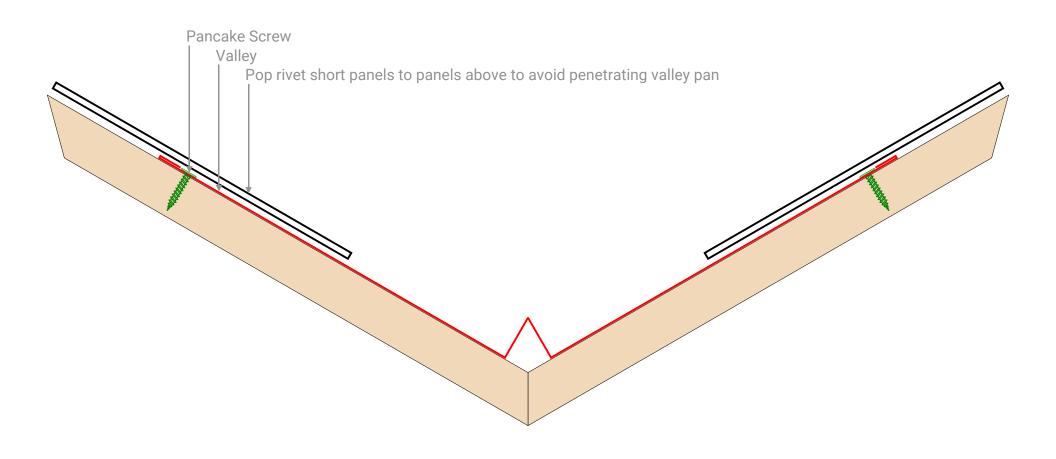




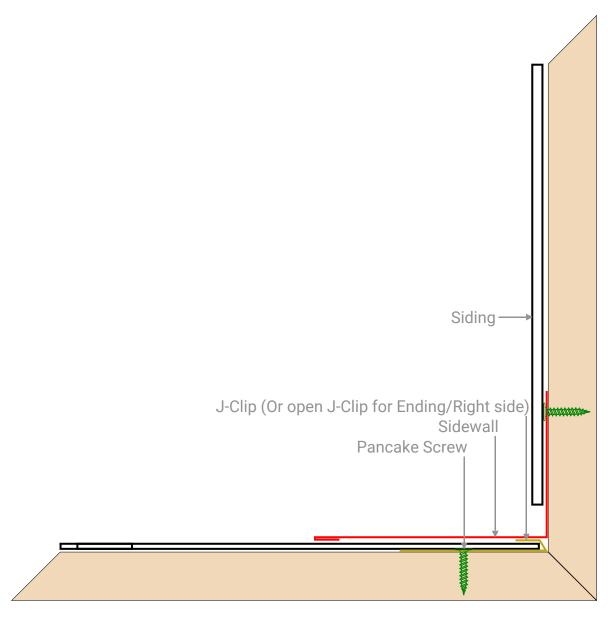


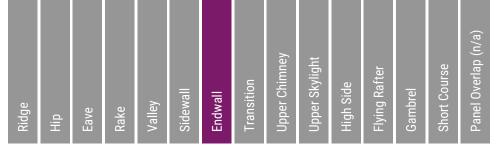

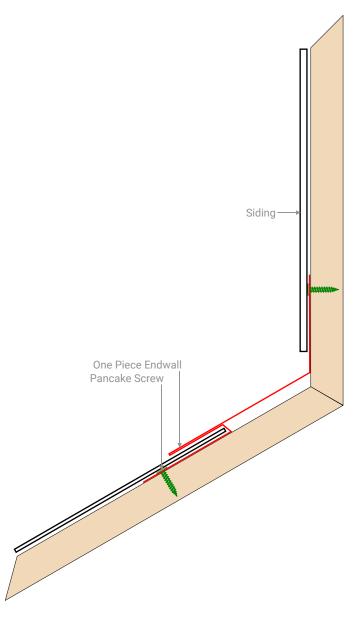



Victorian - Endwall: Simple Endwall

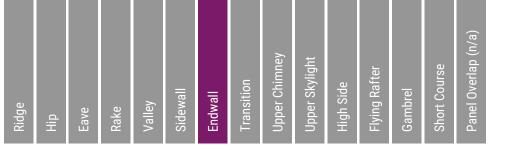


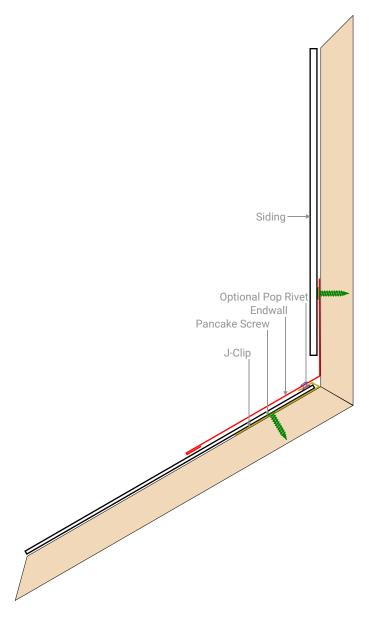



Victorian - Transition															(n/a)
	Ridge	Hip	Eave	Rake	Valley	Sidewall	Endwall	Transition	Upper Chimney	Upper Skylight	High Side	Flying Rafter	Gambrel	Short Course	Panel Overlap (

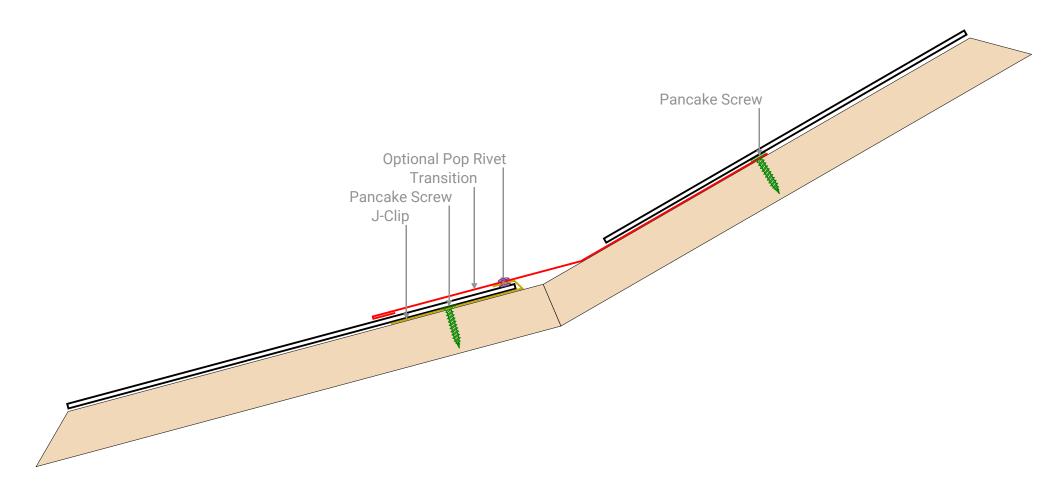

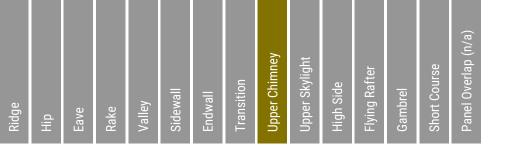


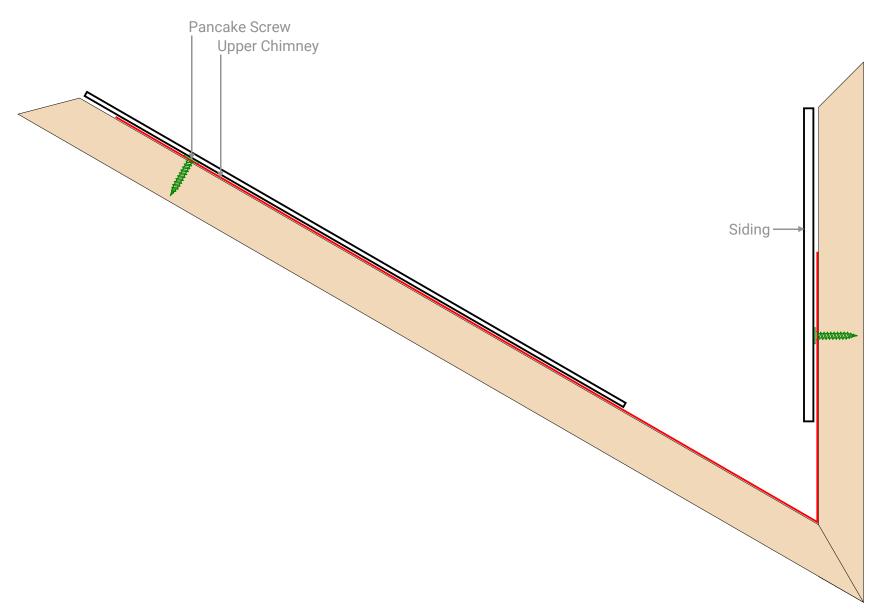


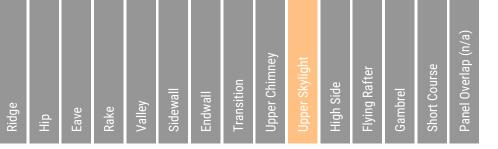


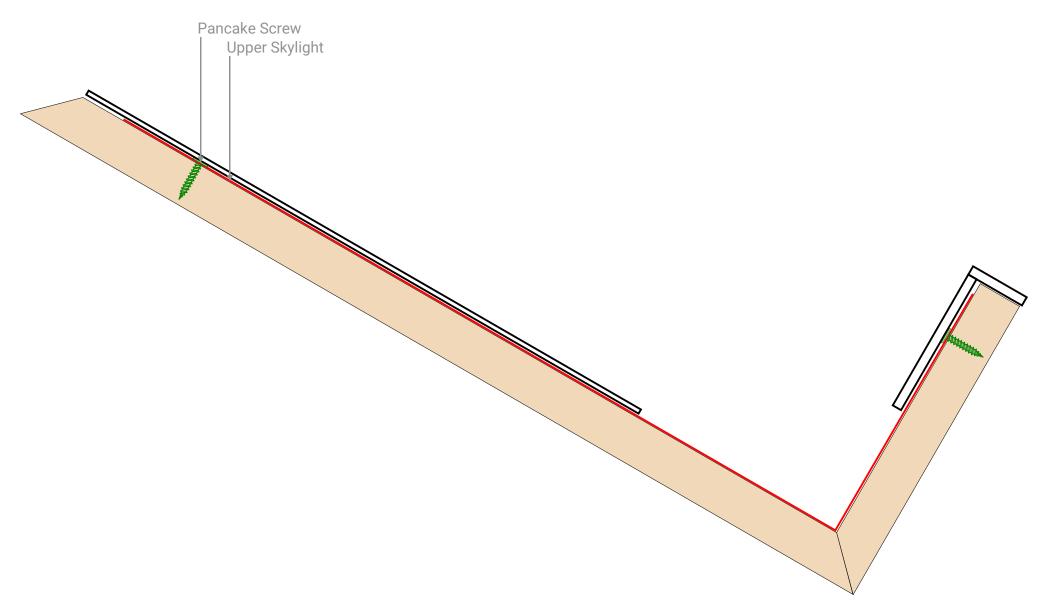



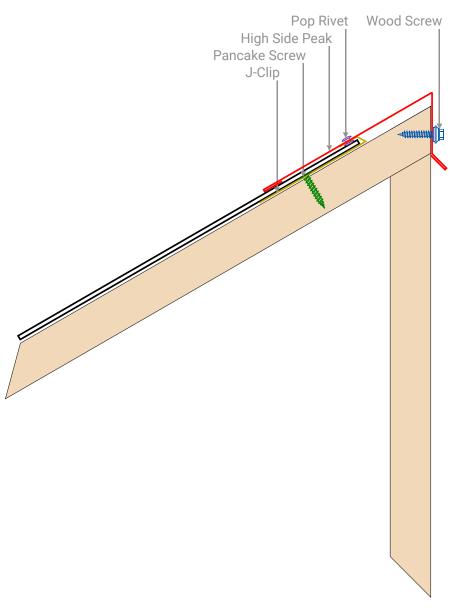

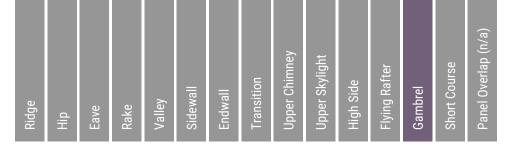

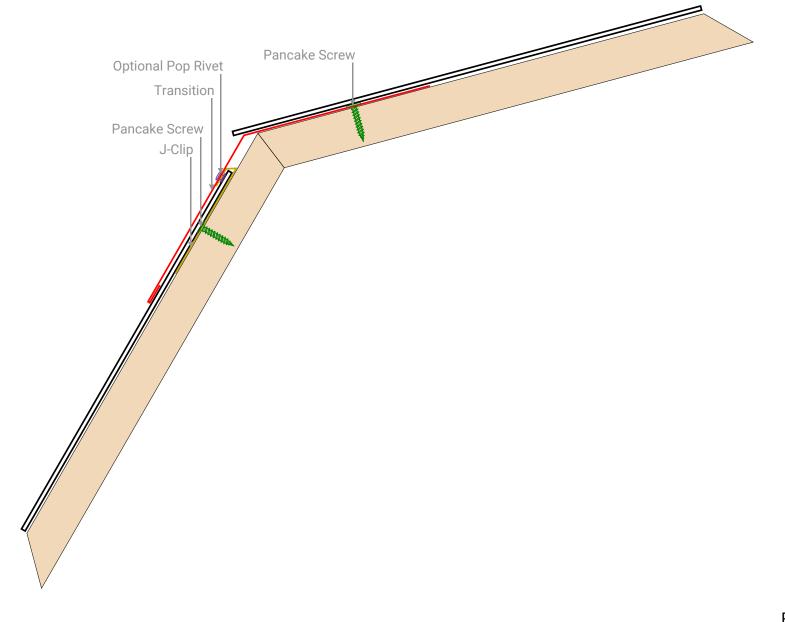



Metal Roofing, Nationwide